Pioneer *sound.vision.soul*

Service Manual

ORDER NO.
CRT2837

STEERING REMOTE CONTROL UNIT

CD-SR100 E

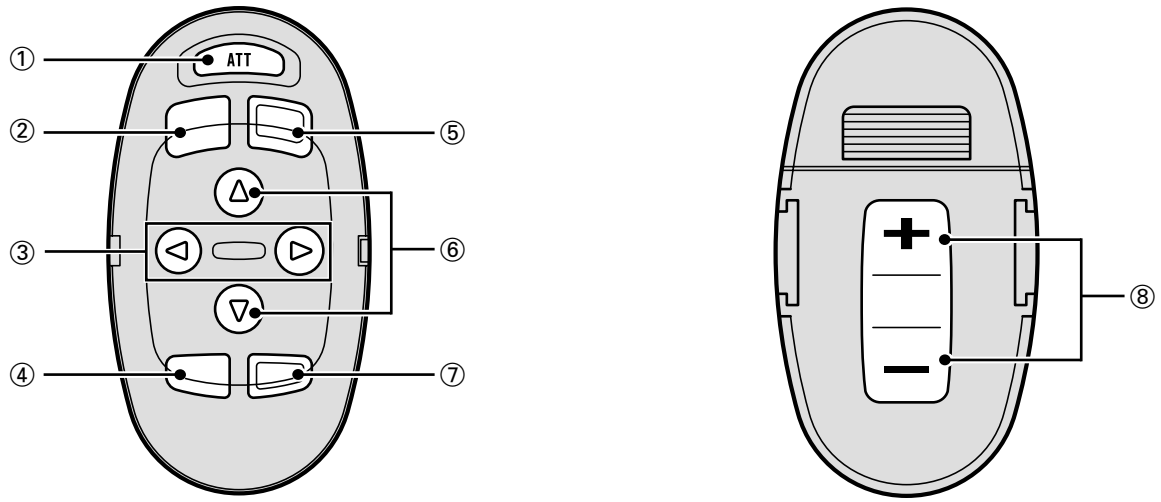

Names of Buttons

Buttons on the car stereo head unit and remote control unit with the same name have the same function.

① ATT button
② BAND button
③ ◄/► buttons
④ FUNCTION button
⑤ SOURCE button
⑥ ▲/▼ buttons
⑦ AUDIO button
⑧ VOLUME

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replaced only with the same or equivalent type recommended by the manufacture.
Discord used batteries according to the manufacture's instructions.

PIONEER CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.
PIONEER EUROPE NV Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE.LTD. 253 Alexandra Road, #04-01, Singapore 159936

© **PIONEER CORPORATION 2002**

K-ZZB. MAR. 2002 Printed in Japan

EXPLODED VIEWS AND PARTS LIST

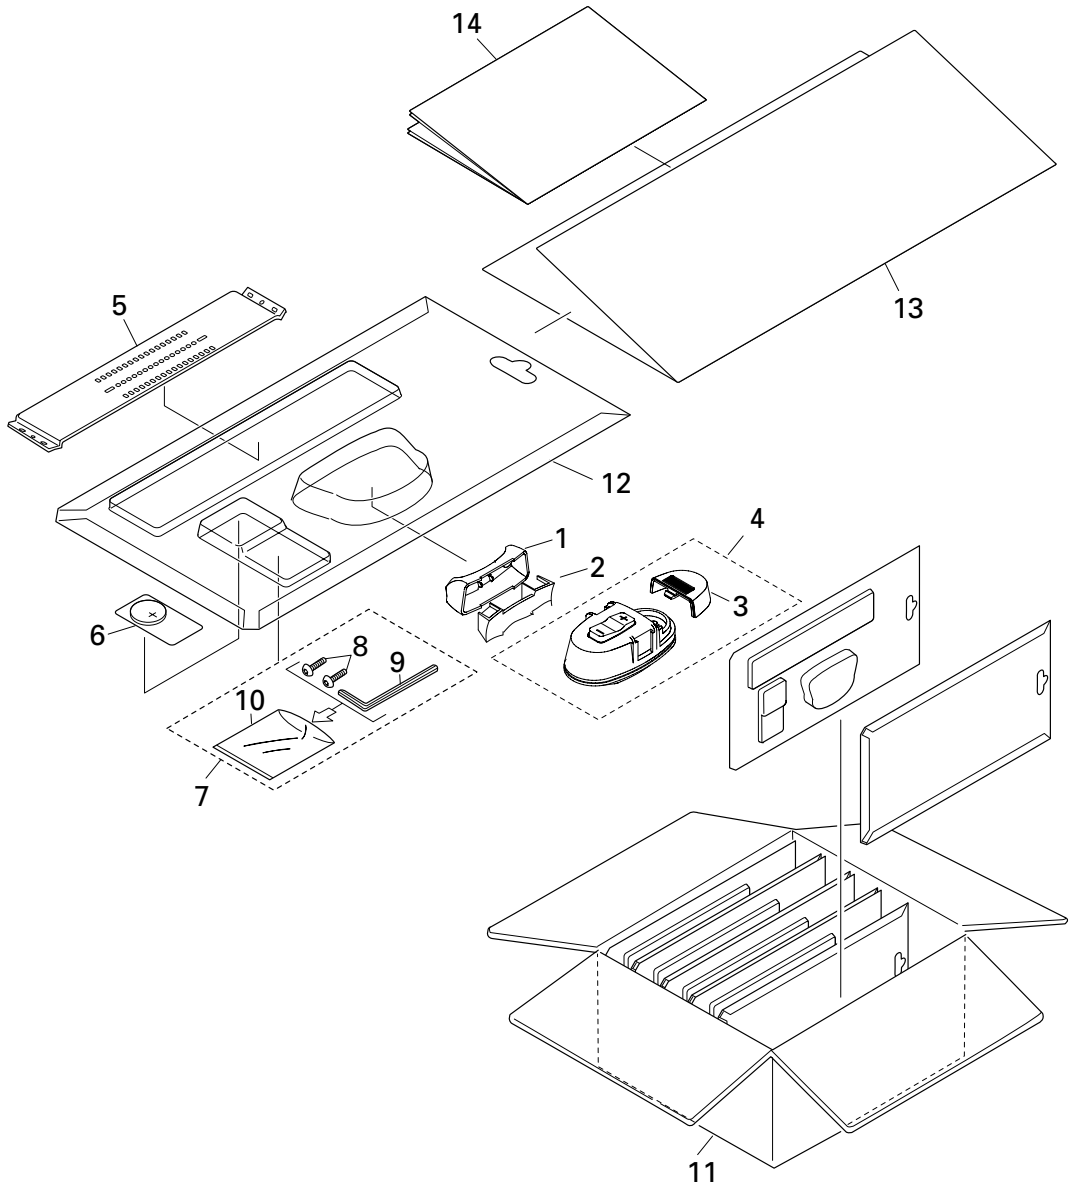

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
  (In the case of no amount instructions, apply as you think it appropriate.)

● PARTS LIST

Mark	No.	Description	Part No.
	1	Holder Assy	CZX3172
	2	Holder Assy	CZX3173
	3	Cover	CZN7655
	4	Remote Control Assy	CZX3256
	5	Belt	CZN7661
*	6	Battery	CZE3175
	7	Screw Assy	CZE3169
*	8	Screw	RMZ30H060FBK
*	9	Hexagonal Wrench	CZE3176
*	10	Polyethylene Bag	CEG-127

Mark	No.	Description	Part No.
	11	Contain Box	CZH6223
	12	Blister Pack	CZH6196
	13	Cover	CZH6221
	14	Owner's Manual (English, French, Spanish, German, Dutch, Italian)	CZR3238